

SHARPER IMAGE®

HIGH VELOCITY AIR DUSTER
OWNER'S GUIDE



MODEL
MACH 01X

CONTENTS

Important Safety Instructions.....	4
Product Information.....	10
Getting Started	11
How to Use.....	12
Cleaning & Storage.....	13
Troubleshooting	14
Warranty.....	15

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See sihomecomfort.com to view, download and print the most current version of these instructions.

INTENDED USE: This product is intended to dust off small to reach spaces only in the United States and Canada. This product is not intended for outdoor, commercial, or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING: Risk to Children and Impaired Persons

Supervision is required during the installation, operation, cleaning and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities.

Children should be supervised to ensure that they do not play with the appliance, its parts and packaging material.

INSTALLATION WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- **WARNING** – To Reduce The Risk Of Electric Shock – Do not operate, charge, or store this product outdoors where it could be exposed to weather or elements.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. The cord should not hang over edges of counters or be placed where it can be crimped or closed in doors. Plug appliance into an easily accessible outlet so the product can be unplugged quickly during an emergency.

SAFE USE WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Use only with included USB cable or other USB-IF approved USB cable.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or appliance with wet hands or use product on wet surfaces.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning on stairs or ladders.
- Do not use near flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, dropped into water, or after dropping has loose parts, return it to a service center. To avoid risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used. If the power cord is damaged, dispose of the damaged cord and replace with a new one in safe condition. Contact Sharper Image Consumer Service at 833-800-8669 (phone) or help@sihomecomfort.com (email) for further instructions about replacement and repair.
- Before moving, repositioning, servicing, cleaning and when not in

use, use the product controls to turn off the power and then unplug. To disconnect from outlet, grasp and pull only the plug. Also, power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.

SERVICING WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonias or other chemicals for cleaning. Refer to the CLEANING instructions provided.
- Do not open appliance housing. To avoid risk of shock, all service and/or repairs must be done by a Sharper Image Authorized Service Center.

BATTERY WARNING—Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Recharge only with the charger or cord specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the

battery may cause irritation or burns.

- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 265°F (130°C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.
- Product contains lithium ion battery. Do not operate or charge product if unit is hot to touch or product body is bulging. Contact consumer service immediately.
- Prevent unintentional starting. Ensure the power switch is in the off-position before picking up or carrying the appliance. Carrying the appliance with your finger on the power switch or energizing the appliance that has the power switch on invites accidents.
- When battery operated product is not in use, keep it away from other metal objects such as paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause sparks,

burns, or a fire.

- Risk of Overheating - Do not charge unit from external power bank or battery pack.
- Risk of fire - Use battery operated unit only with installed battery. Battery is not removable or replaceable. Do not attempt to access.
- Do not incinerate this product, even if it is severely damaged. The batteries can explode in a fire. Dispose of the product in accordance with the following instructions:

PRODUCT DISPOSAL

This product contains an integral lithium battery which is not removable or replaceable. Do not incinerate this product, even if it is severely damaged. The batteries can explode in a fire. Do not dispose of product in normal household waste. We encourage you to help protect our environment and recycle this product through a local electronics recycling program. Please observe local regulations for proper disposal.

This digital apparatus complies with Canadian ICES-003.

SAVE THESE INSTRUCTIONS

PRODUCT INFORMATION

Your product includes the following:

- | | |
|---|--------------------------|
| 1 | Retractable Brush |
| 2 | High Velocity Air Duster |
| 3 | USB-C Plug |
| 4 | USB Plug |
| 5 | USB Adapter Cord |
| 6 | On/Off Button |
| 7 | Indicator Light |




GETTING STARTED

You will need to charge the Air Duster before first use:


1. Remove product from all packaging.
2. Insert the USB-C plug of USB cord into the USB-C Input on product.
3. Connect the other end of USB plug to a power source.

Connect to power in two ways:

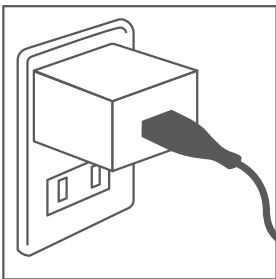

Insert the USB plug of DC cord provided into a 5V DC, 1.5A power adaptor (not provided) and then plug adaptor into a power outlet.

OR

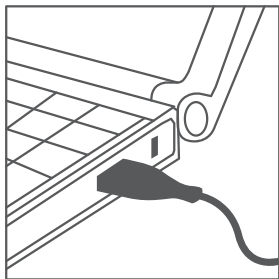

Insert the USB plug of cord provided into the USB input of your computer or similar device. Device may charge at a slower rate.

Use only with Listed/Certified Information Technology Equipment.

HOW TO USE

Please check the Indicator Light, located on the side of the product.



Solid Green - Product fully charged, ready for use

Fading Green - Product charging, above 70% charged

Fading Red - Product charging, low charge

Flashing Red - Critically low, needs to be charged

Note: Using while charging while in critically low power the product may shut off to protect the device until fully charged.

POWER ON / OFF

Press the Power Button to cycle through HIGH, LOW, and OFF.

TIP: For harder to reach places, the brush can be retracted.



Note: To extend the life of the product, do not lay product flat on the inlet side of the Air Duster when in use.

CLEANING & STORAGE

Your Air Duster will need regular cleaning. The Air Duster has no user serviceable parts inside and cannot be opened for cleaning. Never clean the product in any manner other than instructed in this owner's guide.

NOTE: The motor is permanently lubricated and requires no oiling.

1. Power off and unplug the unit prior to cleaning.
2. Dust or wipe unit with a damp cloth.

During extended periods of non-use, you may choose to store your Air Duster. To ensure long life of the product, it is recommended to store your Air Duster by following these instructions:

1. Bring your product to a 70% state of charge (Fading green LED).
2. Unplug product and bundle cord loosely.
3. Cover, or place back in retail carton if available. This prevents Air Duster from accumulating dust over time.
4. Store Air Duster in cool and dry location. For optimal battery life, it is recommended to store your Air Duster at a room temperature between 60-90°F (16-32°C).



CAUTION: Do not store, charge or use in extreme temperatures: below -4°F (-20°C) or above 140°F (60°C).

TROUBLESHOOTING

PROBLEM

POSSIBLE CAUSE AND SOLUTION

The unit fails to power on.	Unit is not plugged in. Plug Power Cord into USB outlet or AC adapter.
	Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.
	The outlet is worn or damaged. Try another outlet for AC adapter or contact a qualified electrician.
The unit fails to power on, no indicator light	Battery power is low and may need to be recharged. Plug unit into power source and wait 1 hour to check if indicator light is functioning. If still not functioning, wait 5 minutes, contact Consumer Service for assistance.
Unit is bulging or hot to the touch.	Lithium battery may be damaged. To avoid risk of fire or explosion, cease use immediately and contact consumer service. Make sure unit is unplugged and away from all power sources.

2

YEAR

SATISFACTION
GUARANTEE

WARRANTY

If you're not satisfied with this product, let us know.

Vornado Air, LLC warrants to the original consumer or purchaser this Sharper Image® Product ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost.

For warranty or repair service: Call 833-800-8669 or email help@sihomecomfort.com to obtain a Return Authorization ("RA") form. Please have or include your Product's model number and serial number, as well as your name, address, city, state, zip code and phone number when contacting Vornado for warranty service. Or to file a contactless warranty claim, visit www.sihomecomfort.com/contact.

After receiving the RA form, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To assure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 1-2 weeks for repair and return of your Product after the Product is received.

Repairs not covered by the warranty or outside the warranty period will require a fee to cover the cost of materials, labor, handling and shipping.

This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using

an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage caused by failure to follow these instructions or improper product use. Any such actions will invalidate the product warranty.

All company names and product names are trademarks of their respective owners. © All rights reserved. All technical information, data, and instructions for the installation, connection, and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

©2023 Vornado Air LLC, Andover, Kansas 67002 USA.
Specifications subject to change without notice.
Sharper Image® name and logo are registered trademarks.
Manufactured, marketed and distributed under license by Vornado Air LLC, Andover, Kansas 67002.
Manufactured in China.
U.S. Patents Pending.

Sharper Image® Distributed under license by Vornado Air LLC, Andover, Kansas 67002.

S H A R P E R I M A G E[®]